
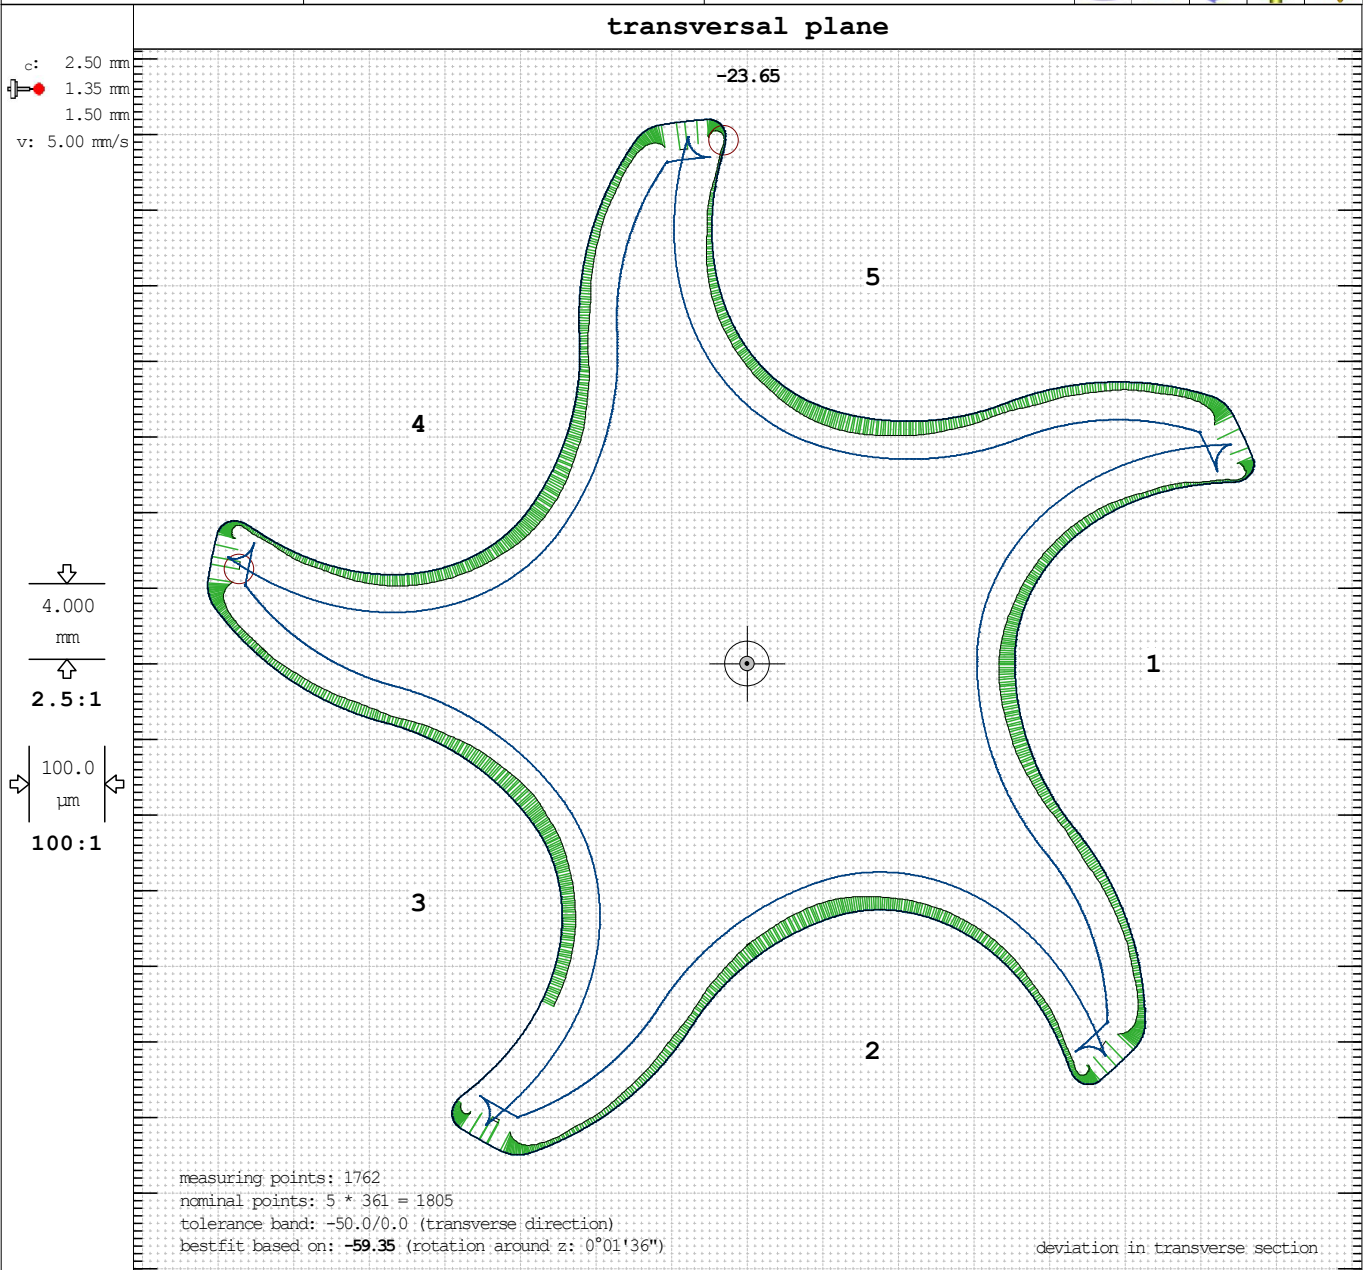


Prüfplan/Workpiece GEAR_PRO_rotor_simulation_female_A4			
Zeichnung/Drawing		Bediener/Operator	
Kunde/Customer		Firma/Company	
Auftrag/Order		Abteilung/Department	
type	female	helix direction	left
threads	5	lead height	178.500 mm
face width	118.700 mm	wrap angle	239°23'41"
		d_f/d_a	28.295/57.000 mm
		b_u/b_o	-106.830/-11.870 mm
			gap



	[...]
ff_{max}	-1.9 -50.0/0.0
ff_{min}	-38.8 -50.0/0.0
R_{ff}	37.0 0.0/50.0
ff_{mean}	-14.2 -50.0/0.0
k	---

gap deviation

	1	2	3	4	5
radial gap deviation	limiting diameter: 88.475 mm				
fx	-22.7	-23.8	-25.2	-25.3	-24.5
angular gap deviation	[...]				
α	0°00'45"	0°00'44"	0°01'01"	0°00'50"	0°01'15"